Kora Curved Wood Wall Light

Installation & care guide · Aussie Lights

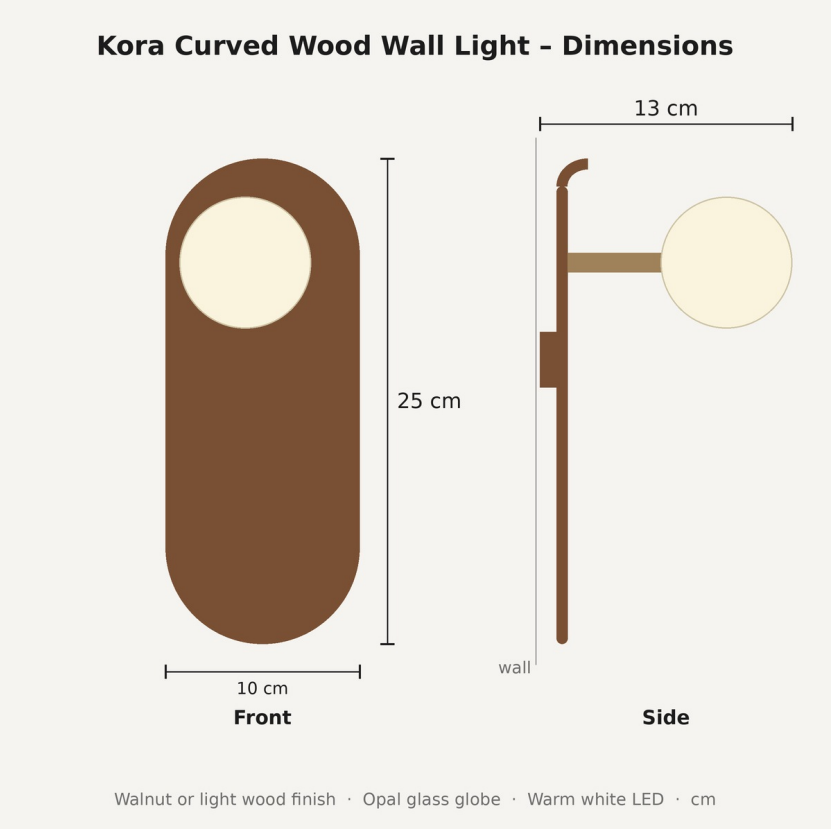

Before you start

- This is a hardwired wall light. In Australia it must be installed by a licensed electrician.
- Turn off the power at the switchboard before installation, cleaning or maintenance.
- Check that the wall can safely hold the light , and use fixings suited to your wall.
- Indoor use in dry areas only.
- Unpack the opal glass globe on a soft surface and handle it with care.

In the box

- Wall light (25 cm, walnut or light wood finish) with opal glass globe and G9 lampholder
- Mounting bracket and screws

Installation steps

1. Check that nothing is missing or damaged before the electrician arrives.
2. Decide the height: the centre of the light about 150 to 170 cm from the floor in a hallway or living room, or level with the top of a headboard beside a bed. For a pair, keep the same height on both sides.
3. Your electrician fixes the mounting bracket to the wall over the electrical point, checking it is level.
4. Your electrician connects the wall light to the mains wiring (active, neutral and earth).

5 Fit the light onto the bracket and tighten the fixing screw. Fit the G9 LED, screw the opal glass globe into place, then restore power and test the light.

Care

- Switch off and let the light cool, then dust with a soft dry cloth.
- Do not use solvents or abrasive cleaners on the glass or the wood-look finish.
- To change the light source, switch off, let it cool, unscrew the opal globe and replace the G9 LED (warm white, 7 W max).
- Contact us if you have any issue with the light.

Need help? Contact Aussie Lights through the contact page on aussielights.com.