
Romy Ribbed Ceramic Wall Light

Installation & care guide · Aussie Lights

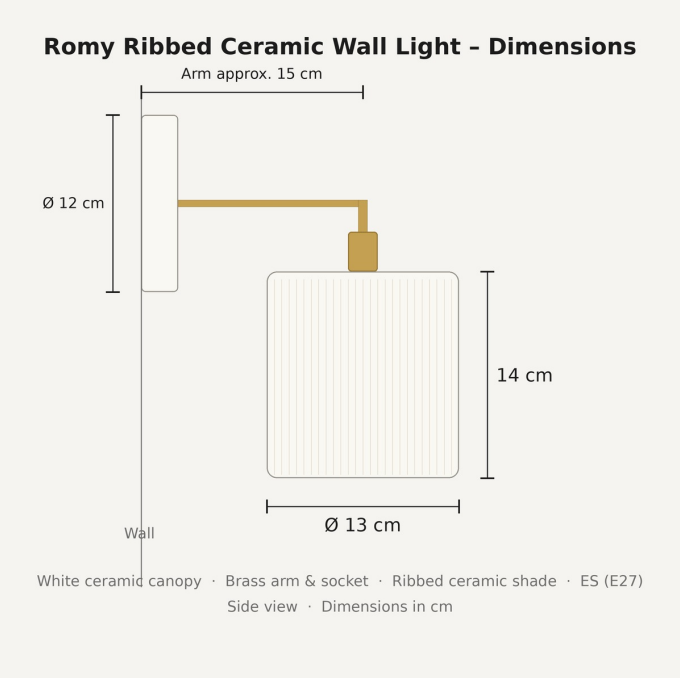

White ceramic canopy Ø 12 cm, brass arm (approx. 15 cm) and socket, ribbed ceramic shade Ø 13 x H 14 cm. ES (E27) fitting: use an LED globe of max 60 W (warm white recommended).

Before you start

- This is a hardwired wall light. In Australia it must be installed by a licensed electrician.
- Turn off the power at the switchboard before installation, cleaning or maintenance.
- For indoor, dry areas only. Handle the ceramic shade with care.

Installation steps

1. **Fix the bracket:** screw the mounting bracket to the wall over the electrical point, with the bracket centred where you want the light.
2. **Connect the wires:** your electrician connects the light to the mains wiring with the connector block (active, neutral and earth where fitted).
3. **Mount the light:** place the ceramic canopy on the bracket and tighten the fixing screws so it sits flush against the wall.
4. **Fit the globe and shade:** screw an ES (E27) LED globe into the socket, then fit the ceramic shade carefully to the brass socket ring.
5. **Test:** restore power and switch on.

Care

- Switch off and let the light cool, then dust the ceramic shade with a soft dry cloth.
- Wipe the ceramic and brass with a dry microfibre cloth. Do not use solvents or abrasive cleaners.
- Contact us if you have any issue with the light.

Need help? Contact Aussie Lights through the contact page on aussielights.com.